


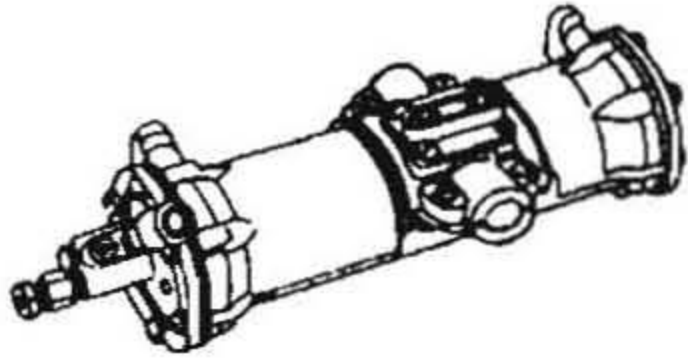







Service Replacement for FPC, FPSC, FPSP, FPD, FPDP Motors

**Component parts for Assembly of Service Motors
(to replace original equipment motors)**

POWER UNIT	SHAFTS	LEVER AND GEAR ASSEMBLY	PLATE AND BUSHING
	 F-1178 Threaded  F-1160 Knurled  F-1376 Flat Taper		 Re-use original plate and bushing; if new part is required, order number listed.

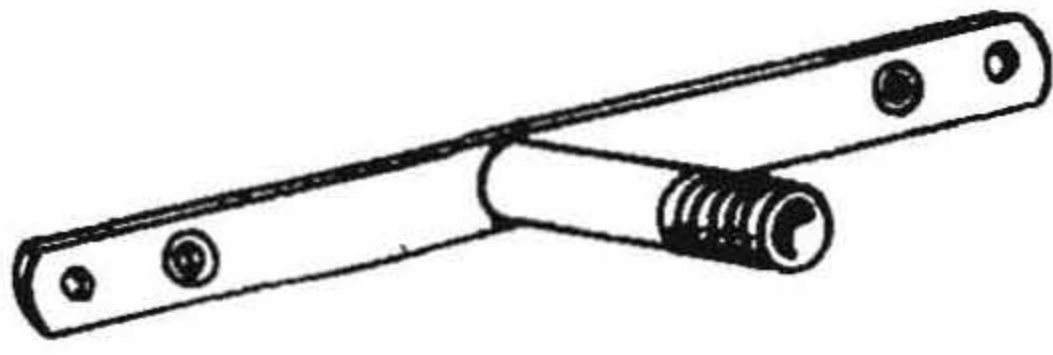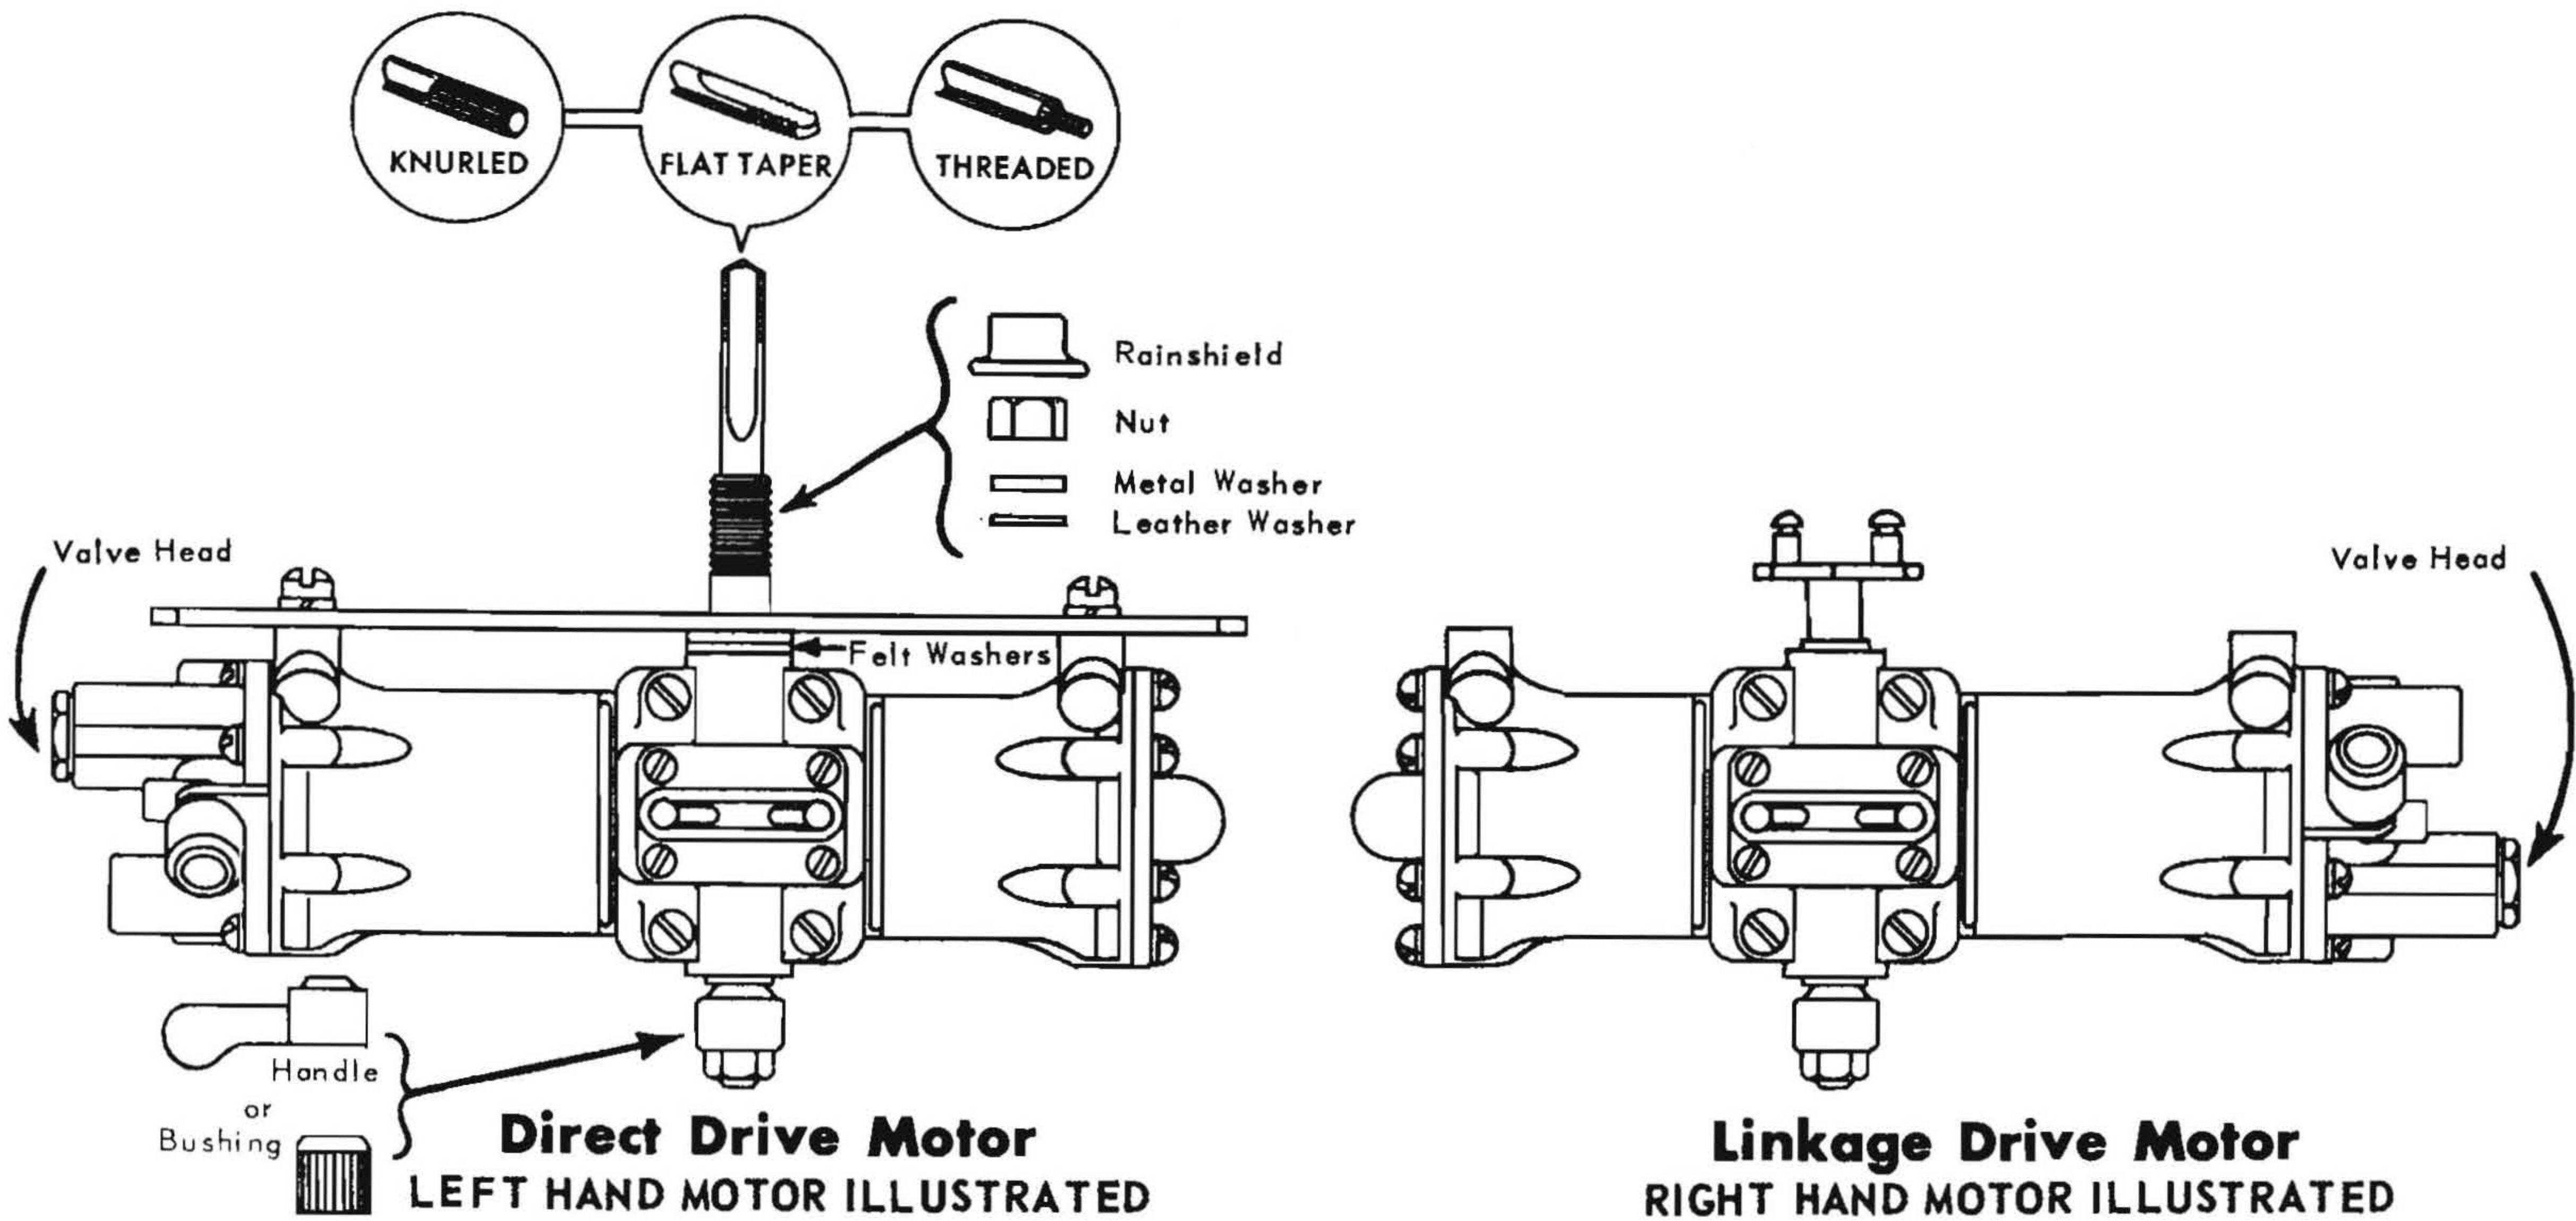

DRIVE LEVER & SHAFT ASSEMBLY INSTALLATION

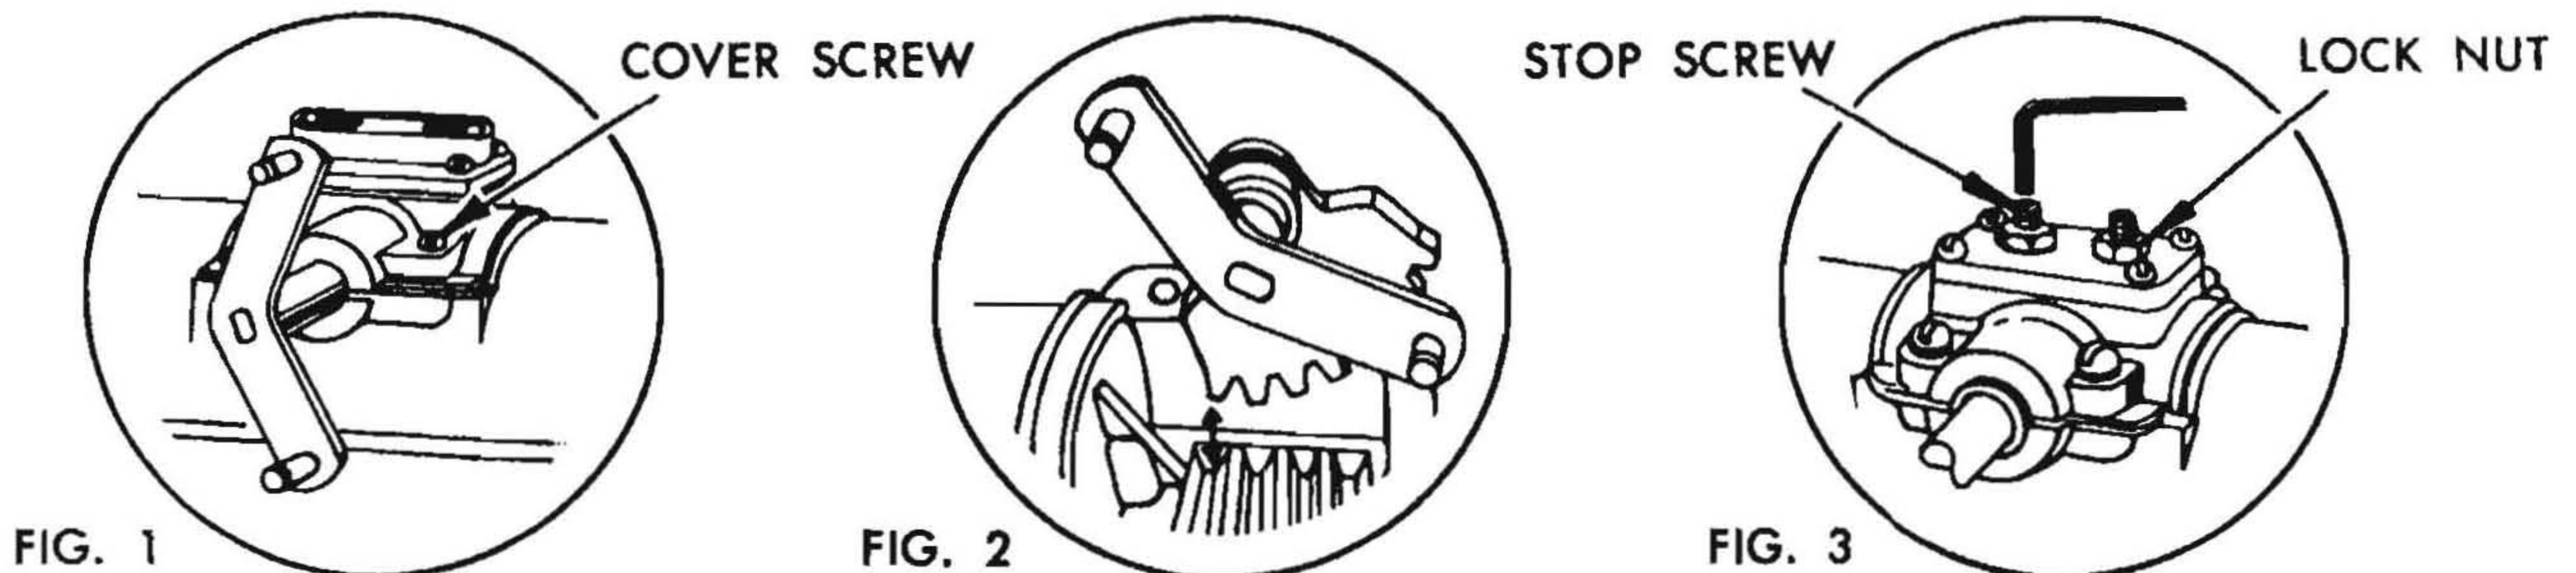


FIG. 1 — Remove 4 screws holding shaft cover. Shaft and gear must be replaced as a unit. FIG. 2 — Insert gear in rack at either end. End tooth of gear must engage end notch of rack. FIG. 3 — Replace cover and screws. Attach air line and run wiper at slowest possible speed. Turn down stop screw until wiper stops, then back off just enough to permit wiper to operate. Repeat operation with other stop screw. Tighten lock nuts to maintain this position.